

## **How to change the mode and use same parameters as WJ200 Series.**

To change the operating system parameter list to the basic mode WJ200 series format,

- change the extended mode selection parameter Ub-04 to 01,
- then change the initialization selection parameter Ub-01 to 04,
- and then execute initialization using parameter Ub-05 by setting to 01.

The inverter will change modes, and all settings will go to default, and any EZSQ program will be erased. This procedure can be reversed using parameters b084, b170 and b180 if you choose to use Extended mode in the future. However, any prior EZSQ program will not recover.